


Slatwall Installation Instructions

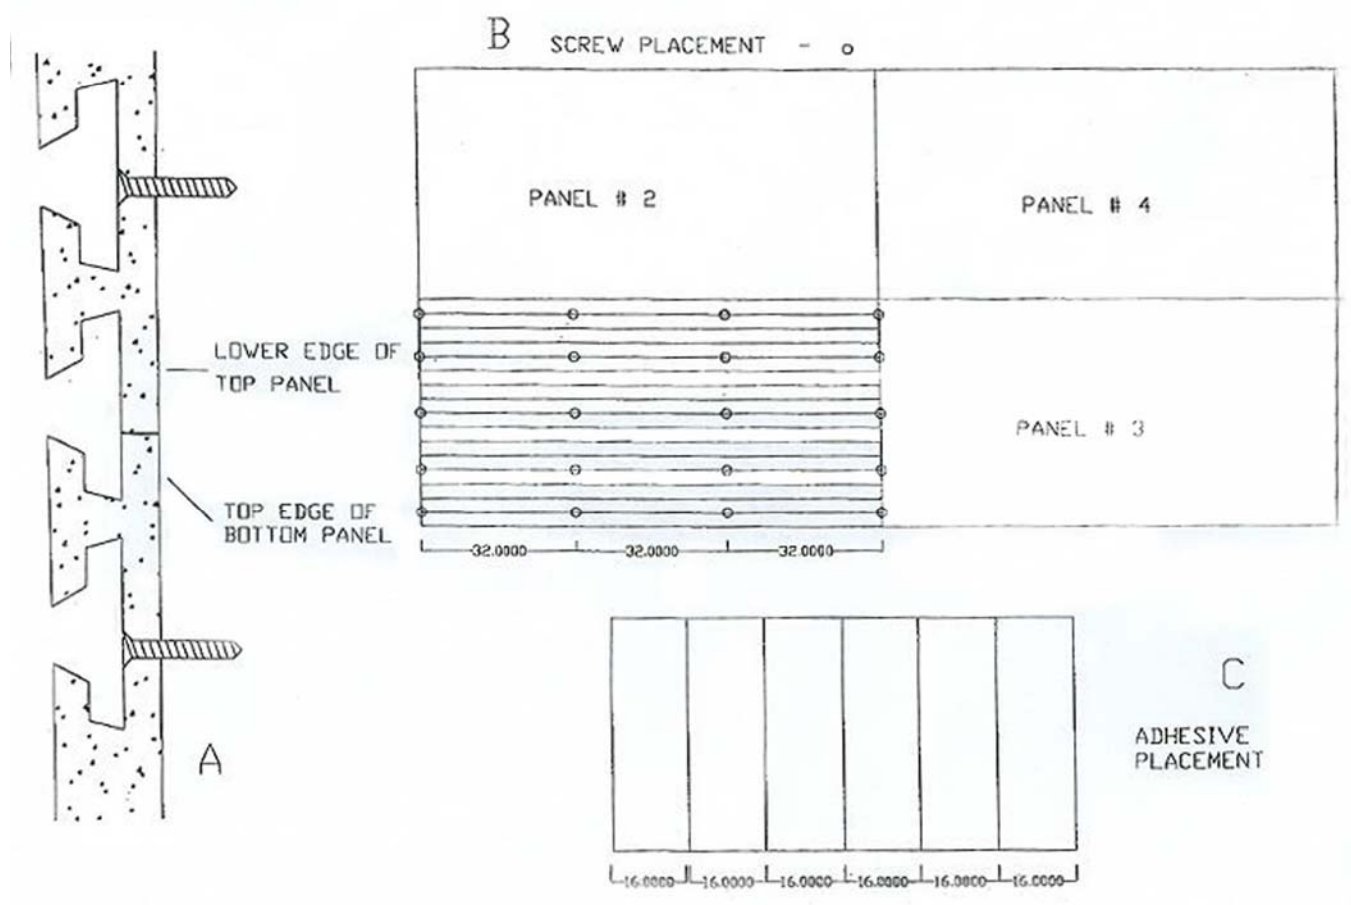

Description:

48" x 96" grooved display panel – all panels grooved the 96" direction.

Equipment required:

- Screw gun with bits
- Level
- Chalk line
- 1 ½" (minimum) flathead screws – 20 per panel
- Panel adhesive (BF Goodrich PL 200 or comparable)

Panel direction:

The panel is manufactured with a top and bottom edge to facilitate horizontal seaming. The bottom edge has the slotted lip and the top edge is flat as shown in drawing "A".

Surface preparation:

The panel may be installed on smooth wall surfaces or on parting strips attached to the walls. Clear the wall of all protruding nails, hooks, etc. Mark a level chalk line 48" above the lower edge position.

Installation:

Apply panel adhesive to the back of the panel using one bead of adhesive at each stud location. The screws should be installed as shown in drawing "A" & "B" with 5 screws at each edge and 5 screws at the 32" & 64" stud locations. The screws should be installed through the groove opening for the best appearance.

The second panel is installed above the first panel by placing the slotted lip on the top edge of the lower panel and aligning the sides. Use adhesive and screws as done on the first panel.

Vertical seams:

The grooves should be aligned and the panes butted as close as possible for minimal seams.

Horizontal seams:

Horizontal seams will not be noticeable if the slotted bottom edge is tightly placed on the flat upper edge of the lower panel. See drawing "A".

NOTE:

If the total installation height cannot use full 4' panels, the excess should be cut from the lower edge of the bottom panel for best appearance. Adjust the height of the chalk line accordingly.